

LockState ResortLock Software Programming Quick Setup Guide

When you receive your lock, it's a good idea to get familiar with it before installation. Follow the quick steps below to program & register your lock with your software so you can start issuing remote codes.


Step 1 Install Batteries & Connect Front of Lock to Back

First we'll get your lock ready to synchronize with the software. Take the lock out of the box and do the following:

1. Take the battery cover off the back of the lock (the side with no keypad) & install 4 AA batteries. Use a screw driver to loosen screws.



2. Plug in the wire from the lock front (keypad side) to the back (battery side).

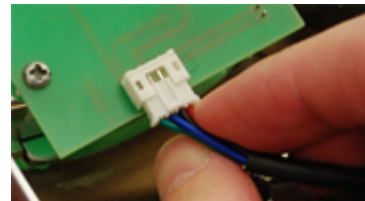

Step 2 Download & Install Management Software

1. Go to <http://resortlock.com/Downloads/ResortLockManager.zip> to download the code generation software.
2. Once downloaded, unzip the ResortLockManager.zip file.
3. Open the unzipped ResortLockManager folder and click on the Setup.exe file.



SETUP
Setup Launcher (SETUP.EXE)
InstallShield Corporation, Inc.

4. Follow the setup instructions to install software.

Step 3 Download & Install 1-Wire Driver



1. Plug your 1-wire & USB adaptor into your computer **before you install the driver**. To do this, first insert 1-Wire's RJ11 connector (looks like phone jack plug) into blue USB adaptor, then plug USB adaptor into your computer.
2. Go to <http://resortlock.com/Downloads/1-wire.zip> to download the 1-wire driver.
3. Unzip the driver and click on the 1-wire driver file to install.

Step 4 Open Management Software

1. Double click on the Remote Code software on your desktop.
2. Login

User Name: dallas
Password: ibutton


The User Name and Password will always be the same.





3. You will then be prompted to change the system password. **Old Password is 000000** (six zeros). Enter a new password like "123456". You will never need to enter this password again after installing.
4. If you are prompted to check your 1-Wire adaptor, just click "OK" through the alerts. This software can also be used with hardware that connects to the lock. Call us for more information if interested.

Step 5 Register Lock with Software & Set Lock Time

In this step, we will set the time on the lock, retrieve the locks serial number and then register the lock with the software. This will all be done using the green or purple programming iButton key.



1. Plug the green or purple programming iButton key into the 1-Wire. The 1-Wire adaptor should still be plugged into your computer.
2. Click on the New Lock Setup Mission Icon in either the left-hand or upper menu.
3. Set preferences for your lock:
 - a. Check the "Blink" box if you would like your locks light to continually blink.
 - b. Check Daylight Saving if it is Daylight Savings time.
- c. Select Classroom or Storehouse mode. Storehouse mode will cause the lock to relock after unlocking. Classroom mode will leave the door unlocked after unlocking.
- d. Click the "Issue Key" button. You will be given a warning that your iButton's memory will be erased. Click "OK".

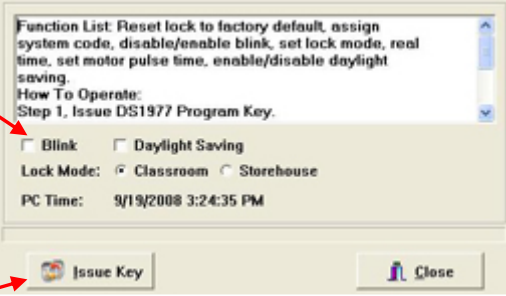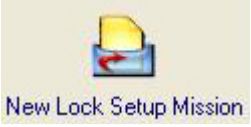




4. Remove the programming iButton key from the 1-Wire and bring to your lock.
5. Press the reset button below the battery pack for one second. Once you let go, you will hear 2 beeps and see a solid green light.
6. While the green light is lit, touch the iButton to the iButton reader on your lock. Hold the iButton down until you hear 2 beeps (this should happen quickly). Remove iButton.



7. Plug the programming iButton key back into the 1-Wire (which should still be plugged into your computer).
8. Click on the Read Key Icon either in the left-hand or upper menu.

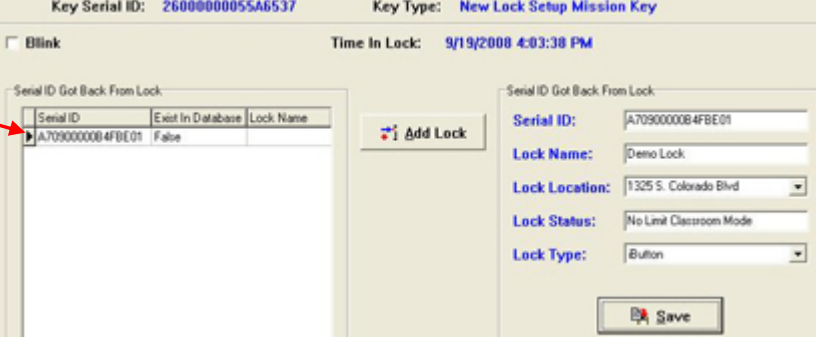9. After the software reads the programming key, your lock's serial number will appear in this screen.
10. Click on the "Add Lock" button to import serial number into the Management Software.
11. Enter Lock Name (any name you like) & address. Lock Type should be iButton & Lock Status should be what you set in New Lock Setup above.
12. Your lock is now registered with your software.



Key Serial ID: 2600000055A6537 Key Type: New Lock Setup Mission Key

Blink Time In Lock: 9/19/2008 4:03:38 PM

Serial ID	Exist In Database	Lock Name
A7090000084FBE01	False	

Serial ID Got Back From Lock: [Add Lock]

Serial ID Got Back From Lock: [Serial ID: A7090000084FBE01]

Lock Name: [Demo Lock]

Lock Location: [1325 S. Colorado Blvd]

Lock Status: [No Limit Classroom Mode]


Lock Type: [Button]

[Save]

Step 6 Generate Remote Codes

1. Click on the Remote Code Icon either in the top or left-hand menu bar.
2. Enter Information:
 - a. Click on Lock Name to select your lock. If no lock appears in popup, click "Query"
 - b. Enter first & last name of guest. You must enter at least one character in each field.
 - c. Enter Start Date & time and End Date & Time.

- d. Click the  **Create Code** button. A 10 digit code will be generated for use.

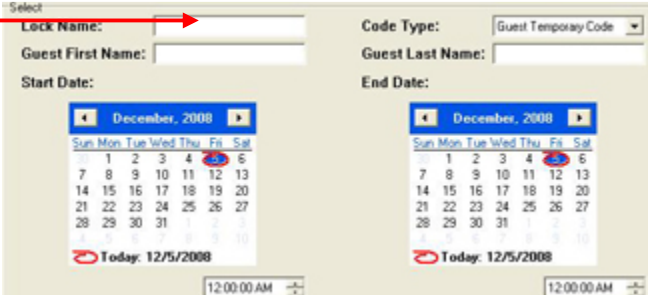

Select

Lock Name: []

Code Type: [Guest Temporary Code]

Guest First Name: []

Guest Last Name: []

Start Date: [December, 2008] [4]

End Date: [December, 2008] [4]

Today: 12/5/2008

12:00:00 AM